

Quick Guide – RealWear Navigator 520

Quick start guide for users – basic functions only

Physical Buttons

1. Power On / Off


- Power on: Press and hold the Power button for 3 seconds
- Power off: Press and hold the Power button for 2 seconds or use voice command “Power off”
- Sleep mode (display off): Short press on the Power button



2. Volume up and down button



3. Action button to get to the home screen

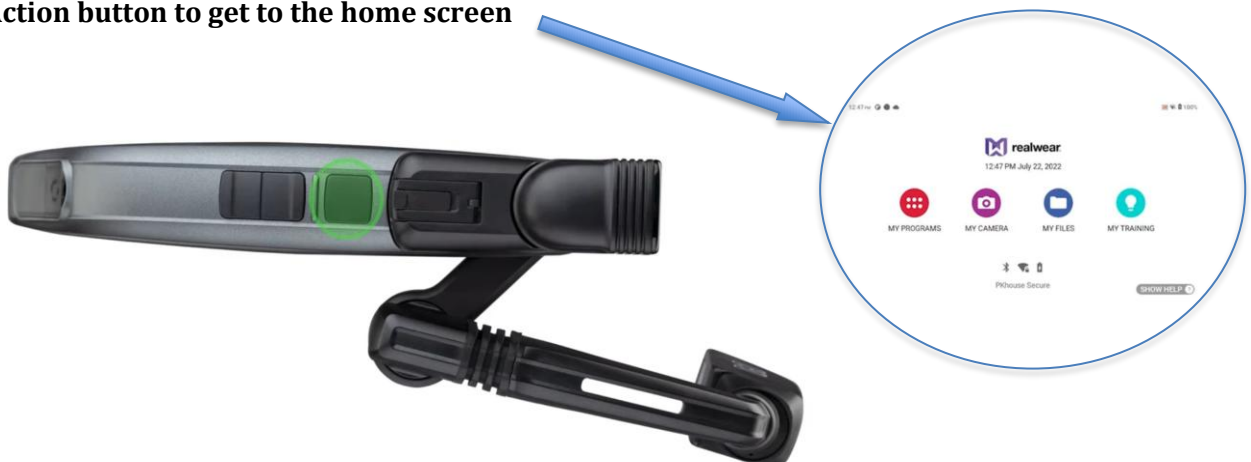

Note: Primary interaction is via voice control.

Common voice commands

Voice Command	Action
"NAVIGATE HOME"	Navigates to home screen
"NAVIGATE BACK"	Navigates to previous screen
"MY CONTROLS"	Navigates to system control panel
"MUTE MICROPHONE"	Mutes the microphone temporarily
"SHOW NOTIFICATIONS"	Displays device notifications
"RECENT APPLICATIONS"	Displays applications running in background
"SHOW HELP"	Displays pop-up window with help commands
"PAGE UP" / "PAGE DOWN"	Scrolls up and down the page
"SELECT ITEM ____"	Use the item number to make a selection
FLASHLIGHT ON / OFF	Turns the FlashLight on

Dominant Eye

Extend your thumb and aim at a distant object with both eyes open. Close one eye at a time. The eye where the object stays centered is your dominant eye.

Mount the display arm accordingly (left or right side).



Mounting the Headband

- Put on the headband and center it on your head
- Tighten until secure but comfortable
- Position the display arm approx. 2–3 cm below eye level
- Align slightly in front of the dominant eye

Battery

Battery life:

- Device on, display active: approx. 6–8 hours
- Device on, display off: approx. 10–12 hours
- Standby: up to 24 hours


Battery level:

- Press the battery button to check the battery charge level
- Charge battery via USB-C port



How to get support?

- If not already done switch on the glasses by the power button. The startup will take around 1 minute.
- Make sure that the battery charge level is at least 50% (see red marking – top right) and the device is connected to the internet (see green marking)

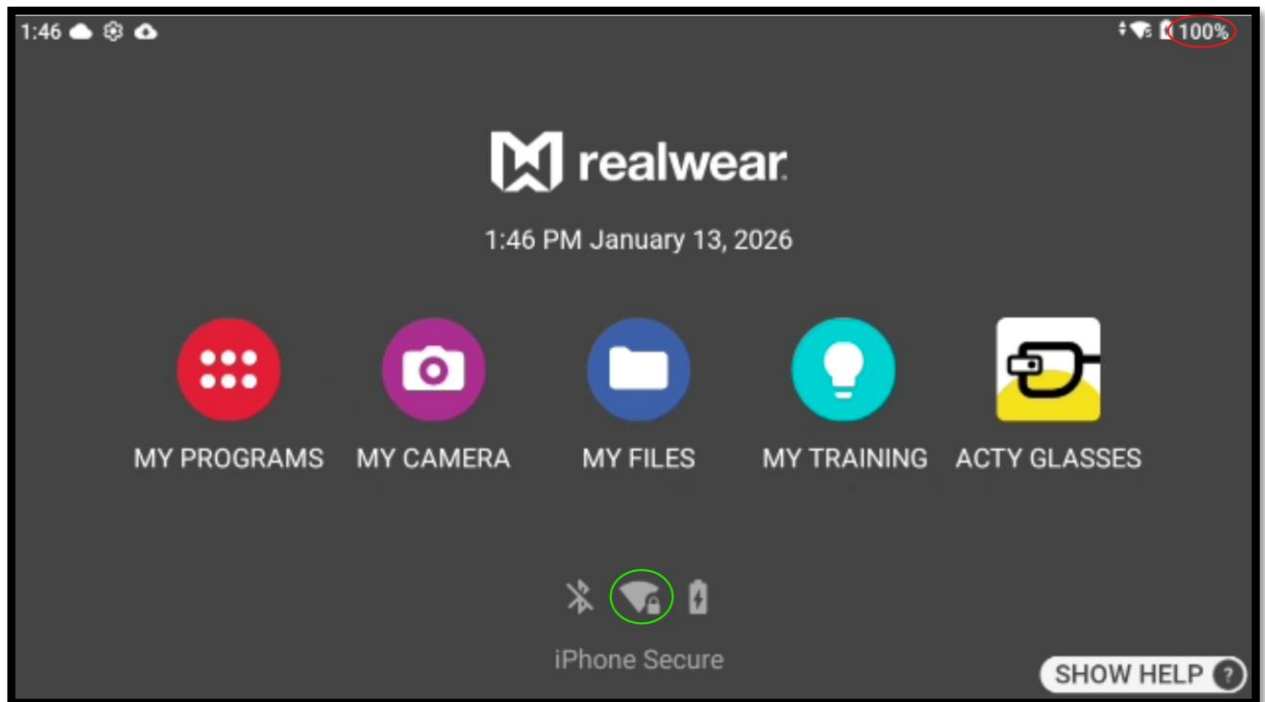

- On the home screen use the voice command “Acty Glasses”
- Acty Glasses will open. On the screen you can choose between sharing your support-code to the expert or just say “CALL” to call the available expert directly. Please note, the support code is a unique code.

